


# KNAPHEIDE VAN EQUIPMENT INSTALLATION INSTRUCTIONS FOR MOBILE BOX SLIDE KIT 33897886

**KNAPHEIDE**  
SINCE 1848

DOCUMENT # 68302-01

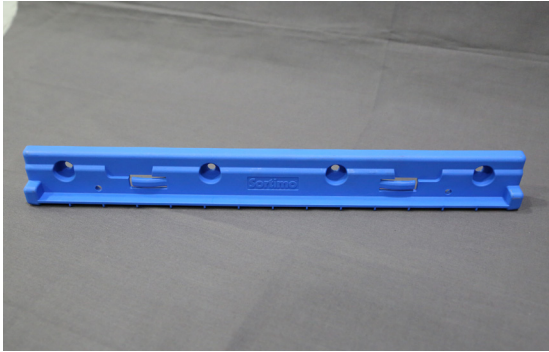

33897682 Hardware Kit		
QTY	PART #	DESCRIPTION
4	33913838	M6 x 10 Ratchet HD Screw
4	33897091	Sprung Nut Plastic / ESMK

The kit includes 2 directional slides (right and left) and mounting hardware kit that is compatible with all 2-wide Shelf accessories.

Prior to mounting the kit, make sure there is enough space available to fit the Axxessory Boxx being installed. Refer to the back of the Knapheide Van equipment Installation Instructions manual for Boxx space requirements.



Determine the desired height of the kit and install each slide with the provided hardware.

**NOTE:** Be sure to mount the slides at the same grid height on the left and right end panels.



**NOTE:** Slides are directional and must be installed facing the correct way. The open end of the track should be facing out the front of the shelf.



Insert Axxessory Boxxes after the kit has been installed.

This document must not be copied or communicated to a third party without the expressed authorization of The Knapheide Manufacturing Company.

FOR REF ONLY

Printed copies are uncontrolled.