

KNAPHEIDE VAN EQUIPMENT INSTALLATION INSTRUCTIONS HARD PLASTIC STORAGE POCKET 33897890

KNAPHEIDE
SINCE 1848

DOCUMENT # 68307-01




33897621 Hardware Kit		
QTY	PART #	DESCRIPTION
2	33913838	M6 x 10 Ratchet HD Screw
2	33897091	Sprung Nut Plastic / ESMK

The Hard Plastic Storage Pocket can be fastened to the front or rear shelf end panels.

The storage pocket comes with mounting screws and nuts.

Plastic tool loops are pre-installed.

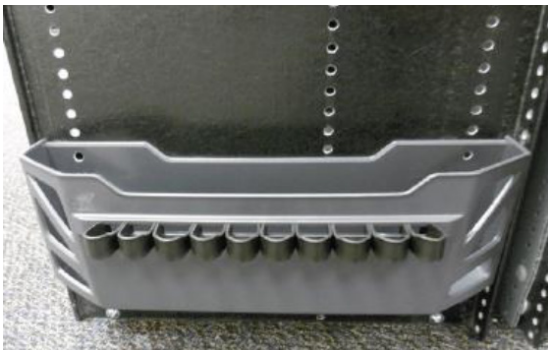

Determine the desired location to mount the storage pocket. Secure the storage pocket to the desired end panel in a horizontal position with the screws and nuts provided.

NOTE: Refer to the next page for tips on removing or replacing the plastic tool loops.



Plastic tool loops are included with the large storage pocket. Tool loops fit the slot on the right or left side of the big storage pocket.



Fold tool loop.

This document must not be copied or communicated to a third party without the expressed authorization of The Knapheide Manufacturing Company.

FOR REF ONLY

Printed copies are uncontrolled.



Insert notched ends of tool loop into slot horizontally.



Turn 90° and release.