


# KNAPHEIDE VAN EQUIPMENT INSTALLATION INSTRUCTIONS FOR REMOVABLE LIP 4 & 6

DOCUMENT # 68305-01

**KNAPHEIDE**  
SINCE 1848

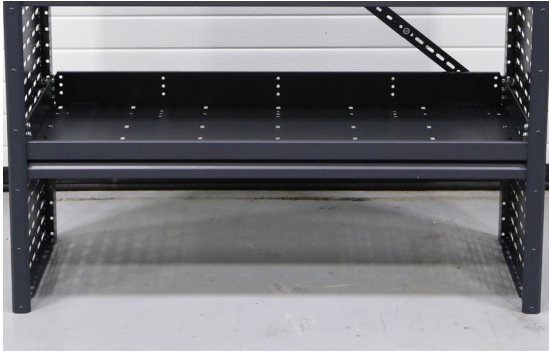

33897725 Hardware Kit		
QTY	PART #	DESCRIPTION
7	33897089	M6 x 12 Flange Screw
7	33897092	M6 Pawl Nut

The Wide-4 and Wide-6 Removable Lips are compatible with all Wide-4 and Wide-6 upgradable shelves. The lips are designed to aid in retaining items on the shelf. The kit includes the removable lip and mounting screws and nuts.


NOTE: The Removable Lips are compatible with Upgradable Shelf Dividers.



Align the shelf lip with the mounting holes on the front edge of the upgradable shelf. Use the M6x12 screws to attach the lip to the shelf, filling as many holes as possible.



NOTE: The Wide-6 shelf lip has more available holes than hardware. Fill as many holes along the front edge of the lip before filling the corners. In this situation it is acceptable to use both M6x12 and M6x14 screws.

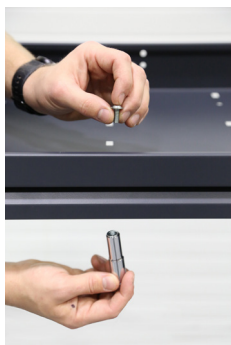

Use the M6x14 screws to fasten the corners of the lip.

NOTE: The M6x14 corner screws are long enough to pass through the shelf lip, upgradable shelf and end panel. The M6x14 screw **is not** long enough to pass through a second shelf and shelf lip. In this situation it is acceptable to leave out one of the corner screws.

This document must not be copied or communicated to a third party without the expressed authorization of The Knapheide Manufacturing Company.

FOR REF ONLY

Printed copies are uncontrolled.



**SINCE 1848**

# KNAPHEIDE VAN EQUIPMENT INSTALLATION INSTRUCTIONS FOR REMOVALBE LIP 4 & 6

DOCUMENT # 68305-01

This document must not be copied or communicated to a third party without the expressed authorization of The Knapheide Manufacturing Company.

**FOR REF ONLY**

Printed copies are uncontrolled.